 




Kit 1649

SUBARU Impreza, 4-dr Sedan, 11- / *12-


***North America**

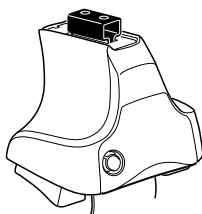

  754 Rapid System
480R Rapid Traverse (North America)

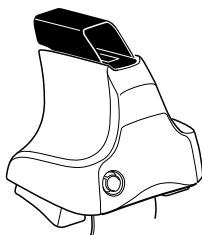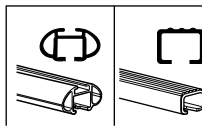

480 Traverse (North America)

 

THULE[®]
SWEDEN

ISO 11154-E

754 Rapid System **x1**

 
 
480R Rapid Traverse (North America) **x1**

754 Rapid System **x4**


480R Rapid Traverse (North America) **x4**

754 Rapid System **x4**

480R Rapid Traverse (North America) **x4**

Europe		North America	
	 x2 	 x2 23 mm 	 x1 17 mm 
 x2 	 x2 23 mm 	 x2 23 mm 	 x2 
 x4  x4	 x4	 x2 23 mm  x2	


 
1

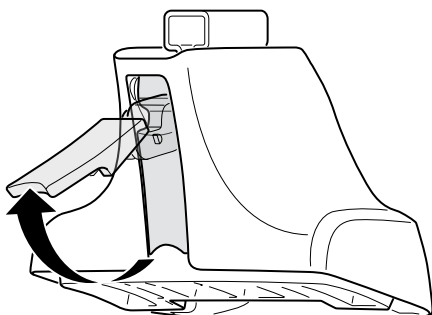



2



 
 
754 Rapid System
480R Rapid Traverse
(North America)

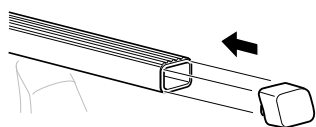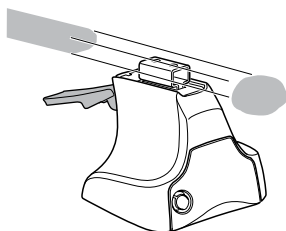

x4

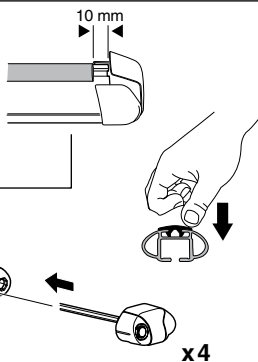  



x4

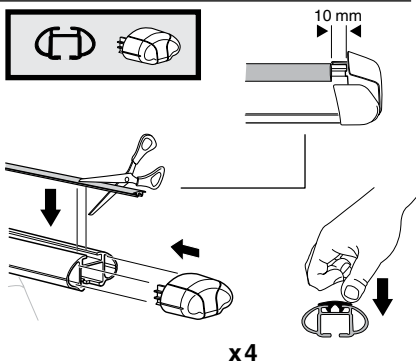  

x4




  480 Traverse
(North America)

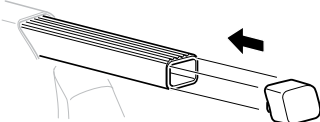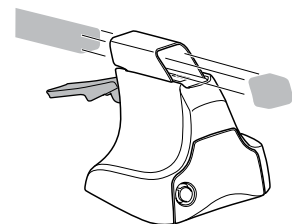


x4

 
3



754 Rapid System

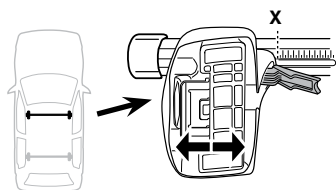 

X	
SUBARU Impreza, 4-dr Sedan, 11- / *12-	41,5

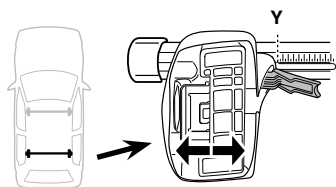 

Y	
SUBARU Impreza, 4-dr Sedan, 11- / *12-	37,5

3



 
480R Rapid Traverse




480 Traverse



(North America)

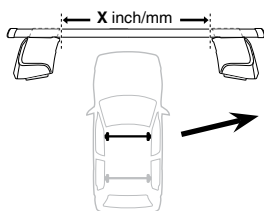


	X inch	X mm
SUBARU Impreza, 4-dr Sedan, 11- / *12-	42"	1066 mm

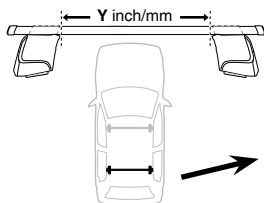 



	Y inch	Y mm
SUBARU Impreza, 4-dr Sedan, 11- / *12-	40 ³ / ₈ "	1026 mm

 4

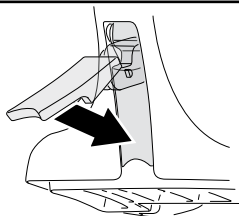


5

  
SUBARU Impreza, 4-dr Sedan, 11- / *12-

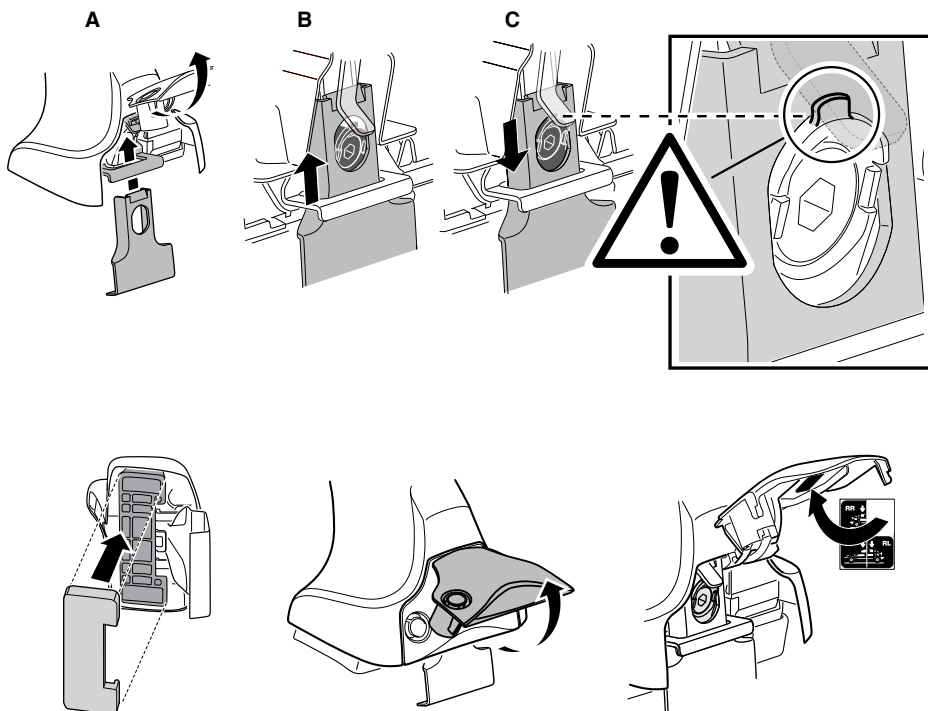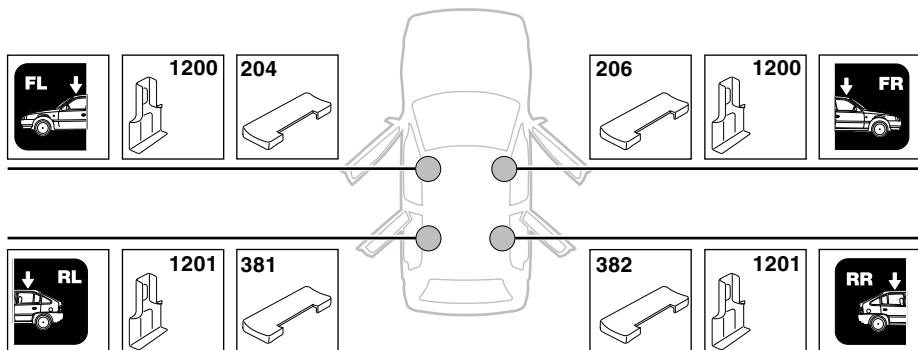


6

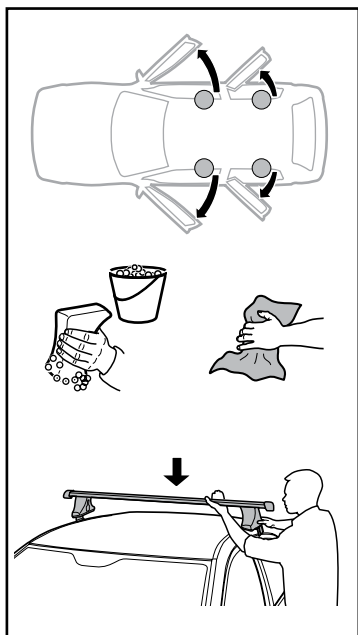 



i

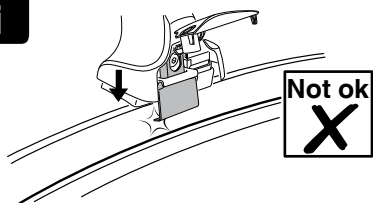 

A

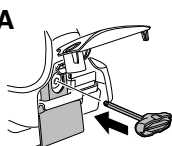 

B

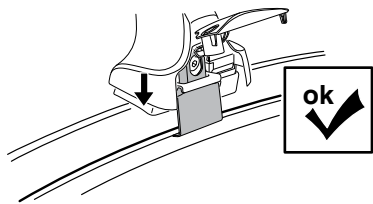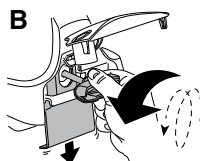  

SUBARU Impreza, 4-dr Sedan, 11- / *12-

X mm

Y mm

X inch

 
 
 
Y inch

230 mm


790 mm

9"

31 1/8"


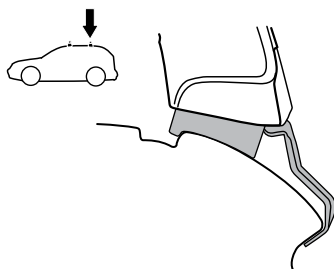
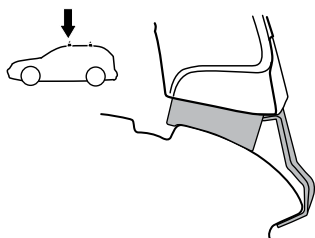
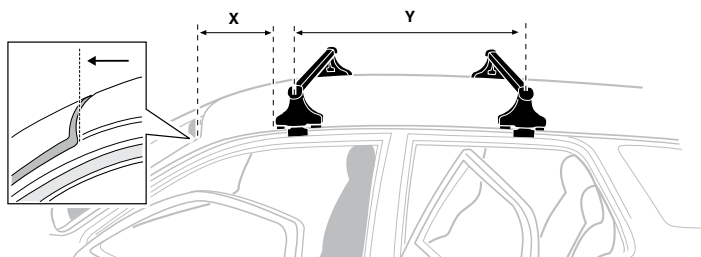


7


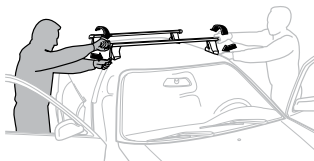 


GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pieļieciet pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

    CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenočno zategnite
HU Egyarástól fűggetlenül szorítandó
GR Σφιγγεται εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ

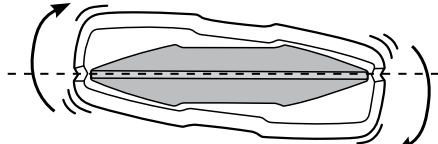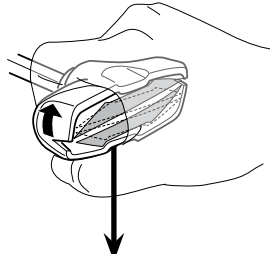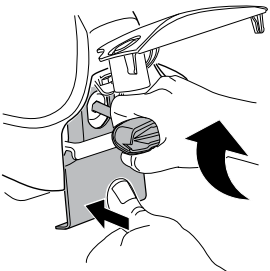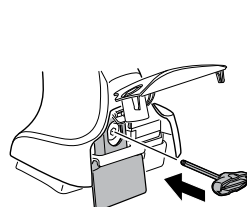



≈ 3 Nm

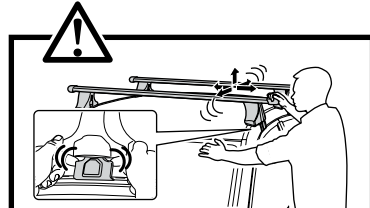 
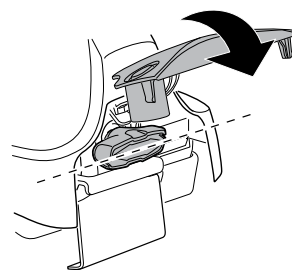 


8



    x1
17 mm

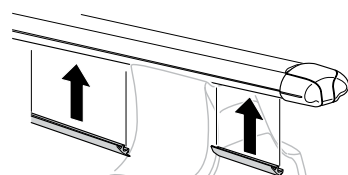

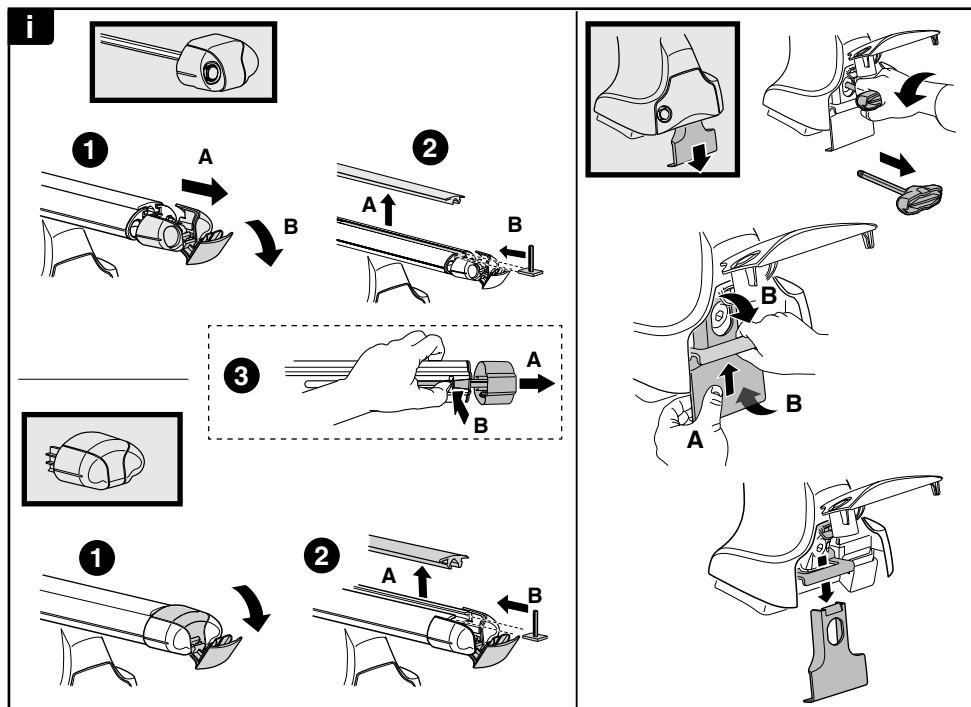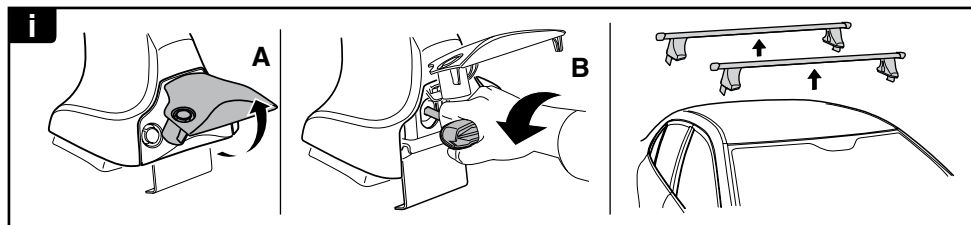

THULE
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA