



Fitting Instruction


Part # 8155A

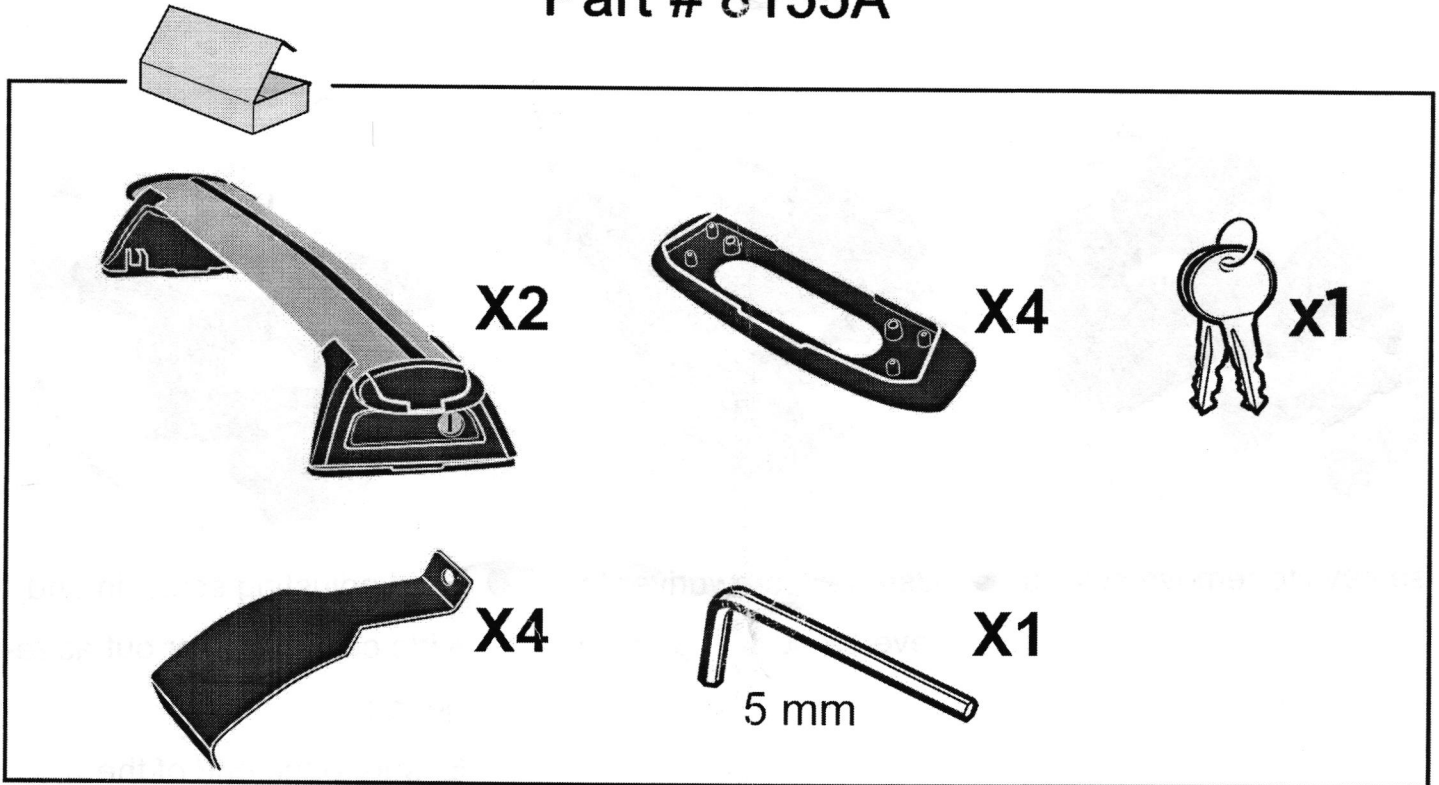


First Time Installation

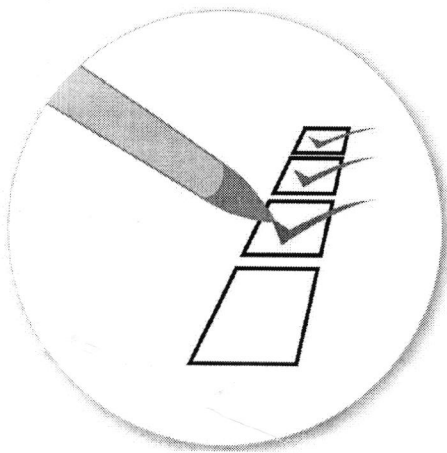

- Remove parts from inside the package and check. Contact your dealer if any parts are missing or damaged.

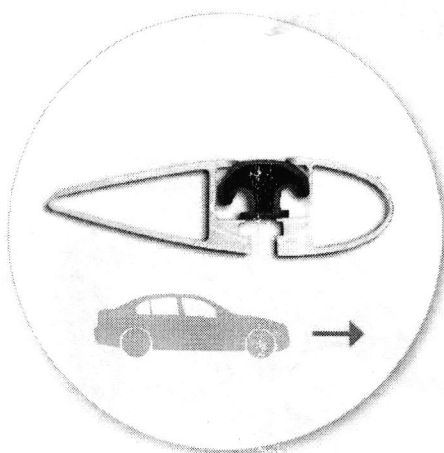



- Ensure the roof rack face towards the front of vehicle.

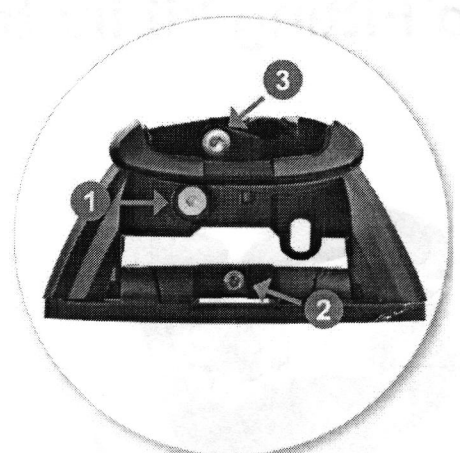

- 1. Adjusting Screw
- 2. Locking Screw
- 3. Security Screw



Crossbar Adjustment

Part # 8155

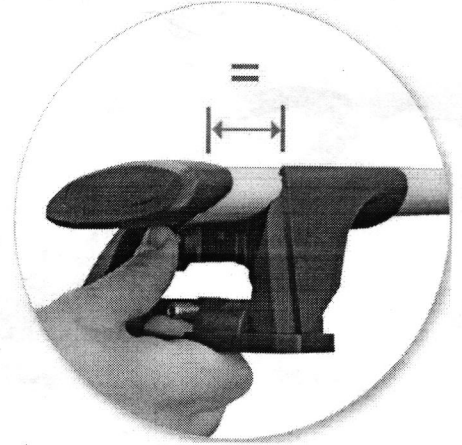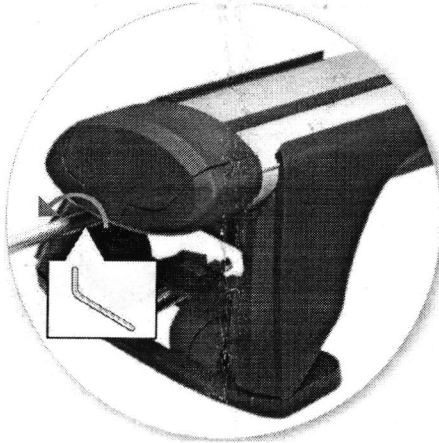


- Use keys to remove covers.
- Use hex screwdriver to reverse adjusting screw.
- Hold adjusting screw in and slide crossbar in or out as required.
Ensure each end of the crossbar is adjusted equally.

To fit roof rack to vehicle, refer to Fitting kit instructions

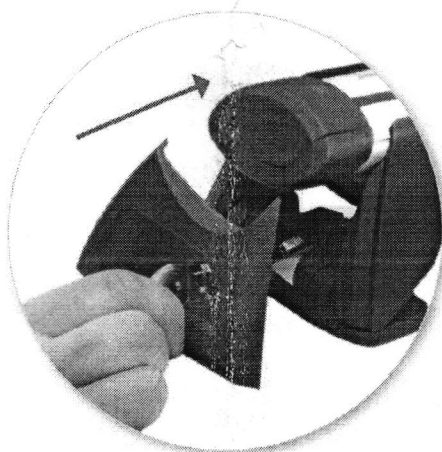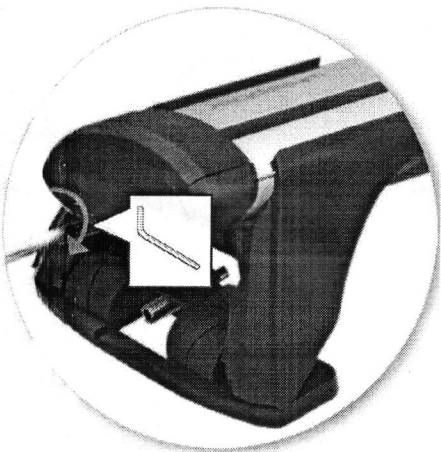


- Tighten adjusting screw.
- Use keys to fit and lock the covers.

How to install clamps Part # 8155A

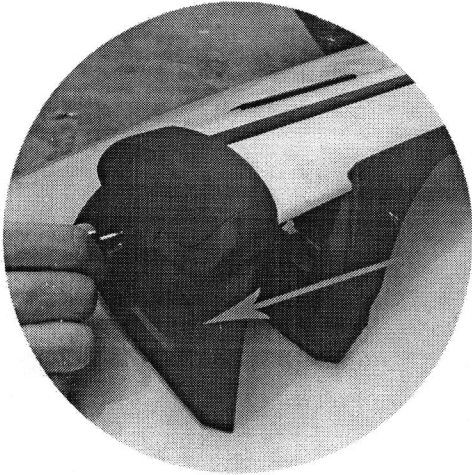


- Use keys to remove covers.

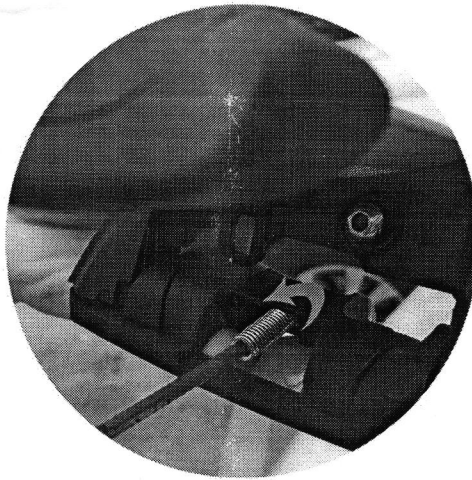


- Use hex screwdriver to reverse adjusting screw.



- Attach clamp to each leg.

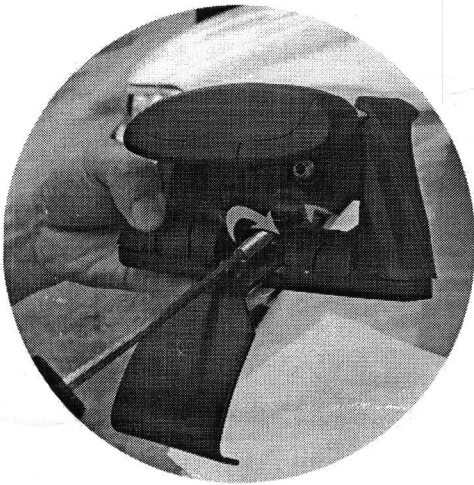


- Refit locking screw so that it goes through the hole in the clamp. Do not begin to tighten the locking screw.

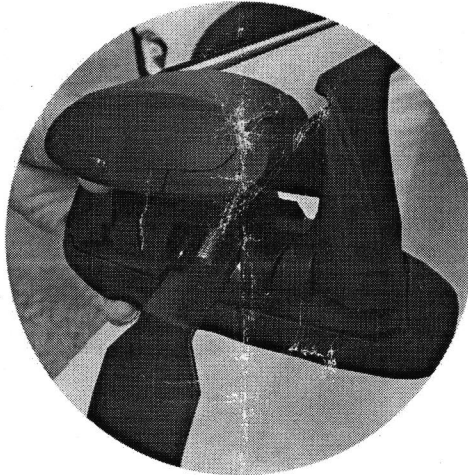

- Fit rubber pad (supplied with crossbar) to foot.




- Make sure the pad fits into the holes underneath the foot.

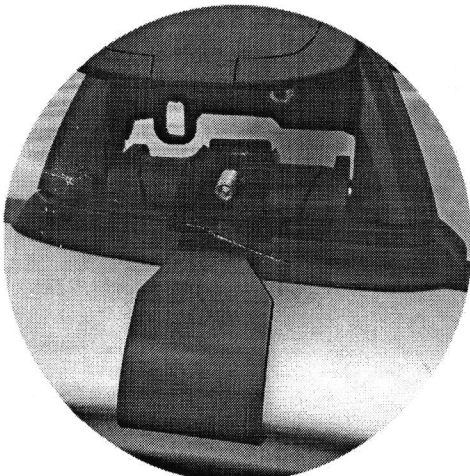

- Place crossbar on vehicle and adjust the bar to ensure the clamp is in suitable position.



- Tighten locking screw on both legs evenly.

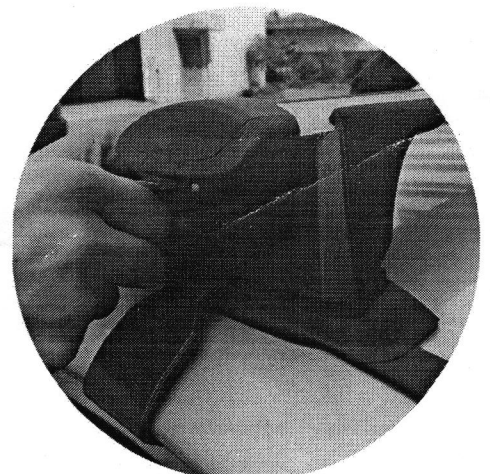

- Use keys to fit and lock covers.