






Thule XT Kit 3141

> Instructions

NISSAN Murano, 5-dr SUV, 15-24

This kit is only for vehicles with fixpoint mounting.

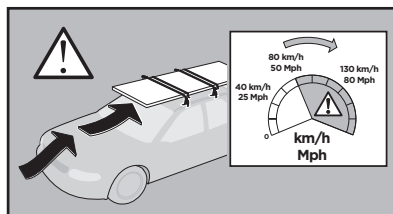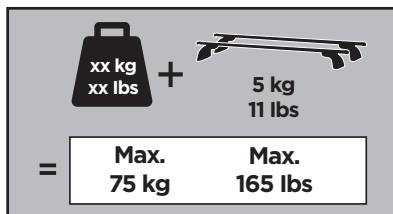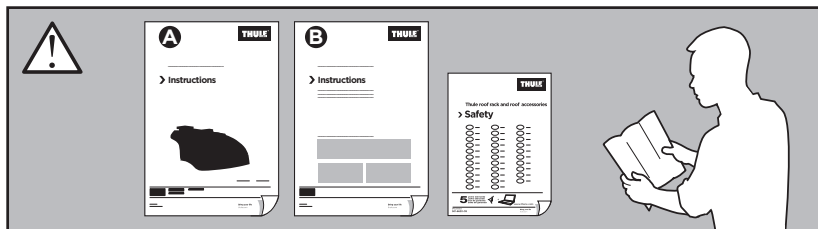


ISO 11154-E


183141

C.20250626
509-3141-01

Bring your life
thule.com




◀ 10 x4



◀ 54 x4

A



x1




50435

x8



52376

x1




x1




x1

1

10



54




FL




FR




54




10



10



54




RL




RR






54



10




2

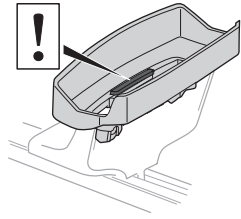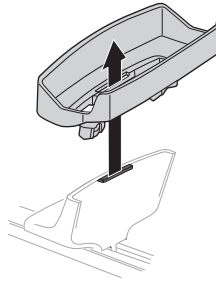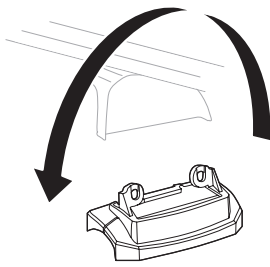


3




A

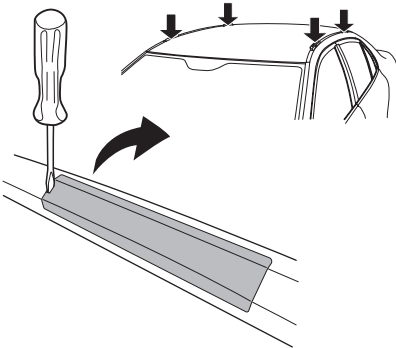

B

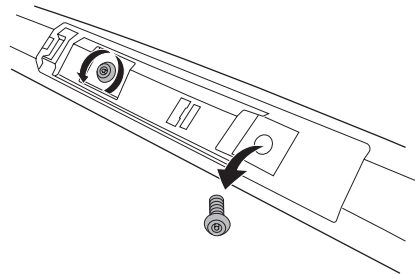

C

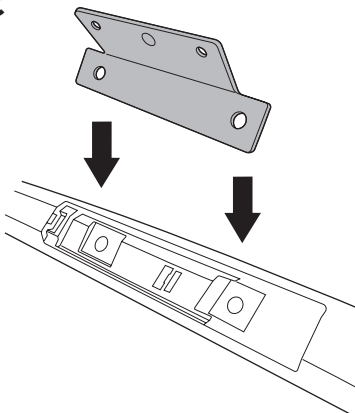

D

